

12 CAN ADVENT - ASSEMBLY INSTRUCTIONS




1. TRAY - ASSEMBLE BY FOLDING OVER ENDS. FOLD LONG SIDES IN FIRST AND THEN FOLD SHORT SIDES OVER THESE TO CREATE THE TRAY.



2. FOLD 2 X BASE FITTINGS AS SHOWN IN FIRST IMAGE.

TAPE ACROSS THE WIDTH AS SHOWN IN SECOND IMAGE.

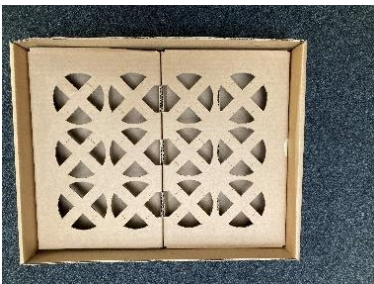

3. PLACE ASSEMBLED FITTINGS INTO BASE OF TRAY.

NOTE - MUST BE SAME IN THE ORIENTATION AS SHOWN IN THE FIRST IMAGE.

DROP DIVIDERS INTO THE TRAY AND LOAD WITH YOUR 330/440ML CANS*

*** PLEASE TAKE EXTRA CARE NOT TO DROP THE CANS ONTO THE TRAY AS THIS MAY DAMAGE THE BASE**

WHEN REMOVING DISCS FROM THE BASE FOR 440ML CANS, PLEASE DO THIS WITH EXTRA CARE TO PREVENT DAMAGING THE BASE

ONCE FULLY LOADED, TAKE YOUR PRINTED ADVENT BOX AND LOCK ONE END BY FOLDING IN FLAPS AND SECURING WITH LOCKING TAB.

SLIDE FULLY LOADED TRAY INTO THE OPPOSITE OPEN END AND AGAIN FOLD IN FLAPS AND SECURE WITH LOCKING TAB.